

REMOVE ENVIRONMENTAL POLLUTANTS, DIRT, GRIME AND SOOT EASILY, WITHOUT RINSING

masonRE Latex 10 and **masonRE** Latex 20

The mess created with other masonry cleaners almost makes the job not worth it. The extensive rinsing and disposal required takes planning, time, and can even damage the masonry you are trying to protect. masonRE® Latex 10 and Latex 20 offer a single-application, rinse-free solution for the removal of dirt and grime on limestone, sandstone, marble, concrete, plaster, brick and terra cotta. This mess-free method means that no neutralization is required at the site.


Available exclusively through Cathedral Stone® Products, masonRE® Latex 10 and Latex 20 can be used both outdoors and indoors. It's easy to apply, using even the smallest airless sprayer. Simply apply a thick, even coat and wait. Drying times will vary, but in typical conditions the product can be peeled off the following day.

Removing the latex film is as simple as peeling back the dried product from the masonry. You'll see that dirt, grime and other soiling will have adhered to the latex film, which can be discarded. Wipe the cleaned substrate with a damp sponge to remove any remaining soil still on the surface. We recommend Latex 20 for heavily soiled substrates, though our experience in the field has shown us that Latex 10 works for most projects.

**REMOVES ENVIRONMENTAL POLLUTANTS, DIRT,
NICOTINE AND MORE | INTERIOR AND EXTERIOR USE
NO RINSING REQUIRED | SAFE FOR THE ENVIRONMENT**

ASK US ABOUT SELECTING THE RIGHT MASONRE® PRODUCT FOR YOUR JOB.

Call (800) 684-0901 to speak with one of our experts, or visit us at www.cathedralstone.com.

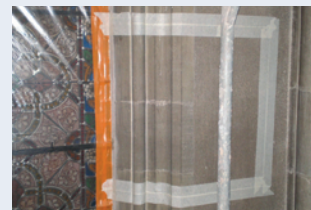

Mockup panel prepared for stone cleaning with masonRE® Latex



The masonRE® Latex product is sprayed on the substrate with an airless sprayer



Dirt, grime and soot adhere to the back of the dried masonRE® Latex, which is peeled off, leaving a cleaned substrate